


Castle Pro-DX Vocis

Keypad Layout Guide

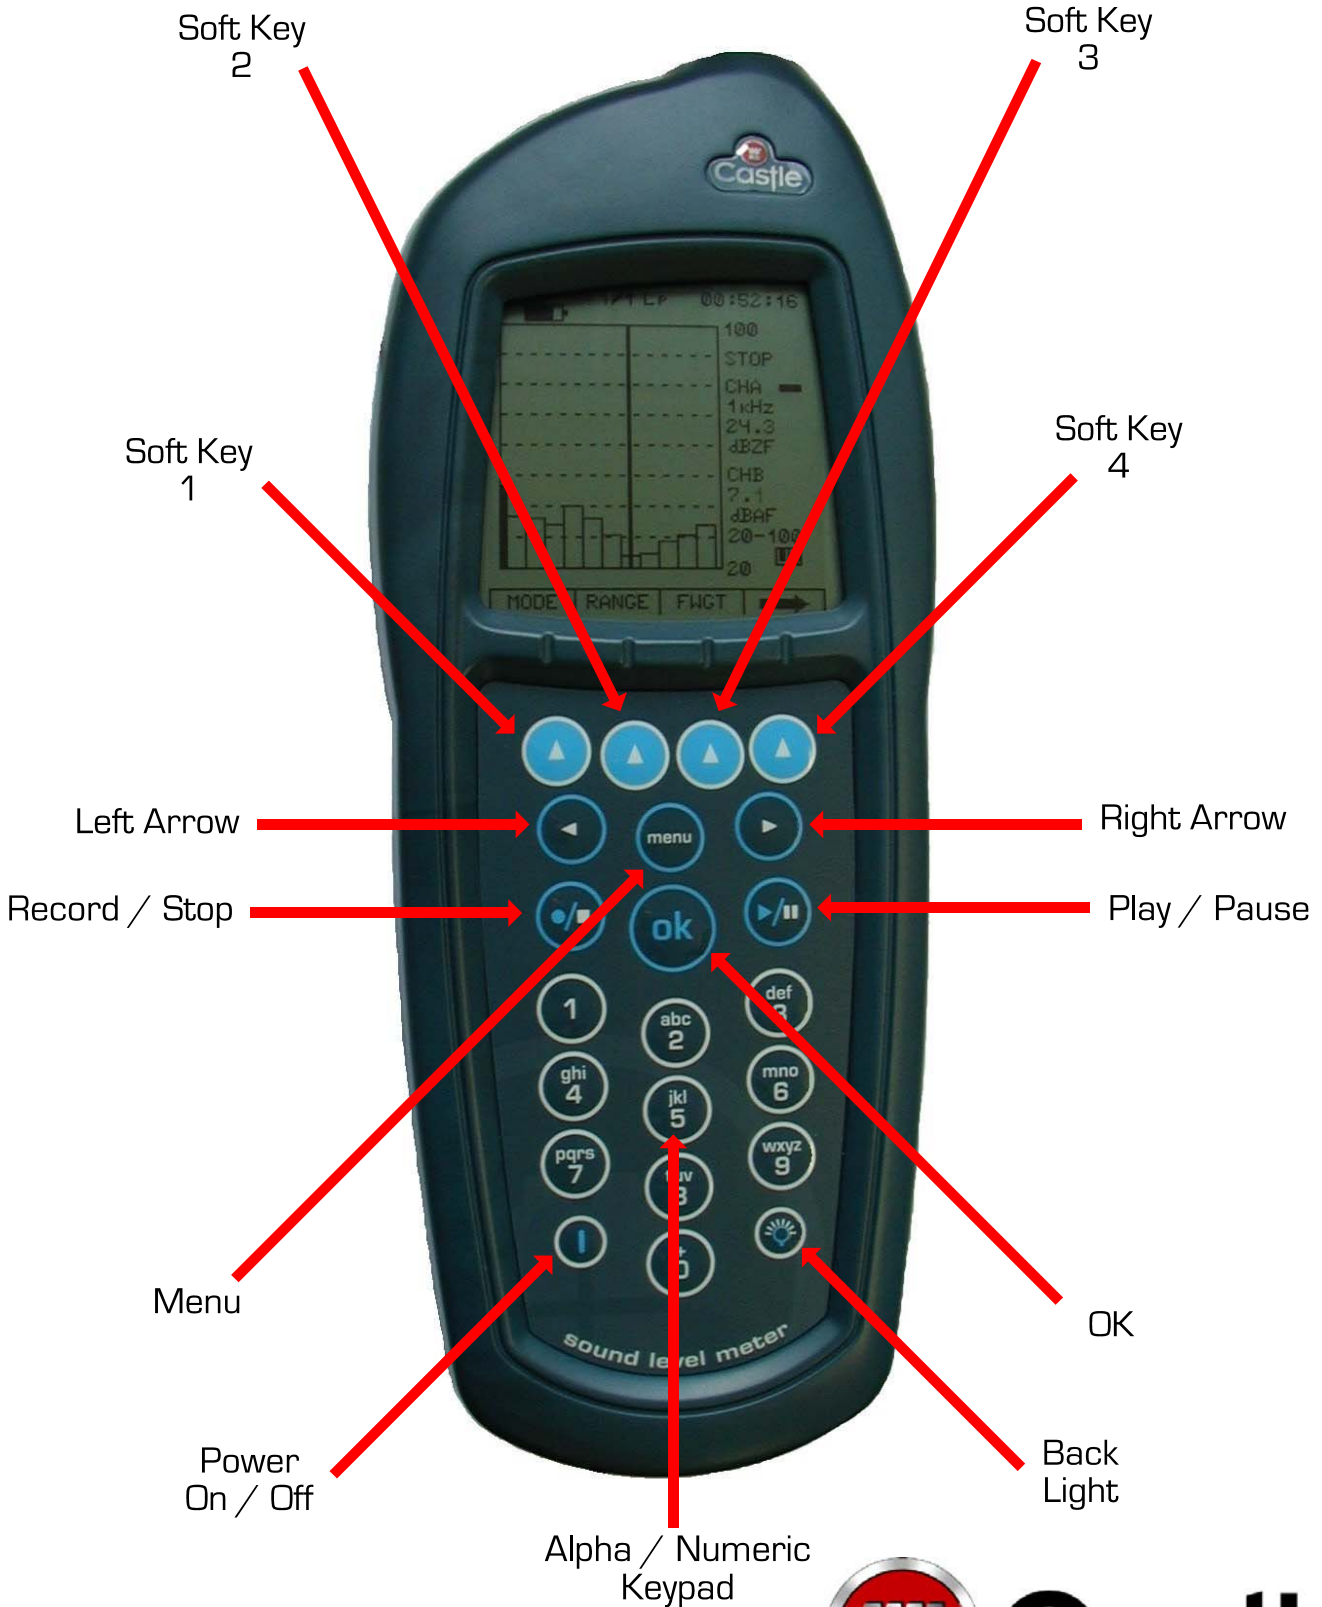

Castle
advanced sound solutions

Castle Pro-DX Vocis

Setting Up A New Log

- Press **Menu** key
- Press **1** key (Logs & Templates)
- Press **1** key (New Log or Template)
- Press **1** key for SLM (Measures only overall, broadband sound parameters) or where installed: -
 - **2** key for Full Octave (Measures overall and $1/1$ octave bands)
 - **3** key for Third Octave (Measures overall and $1/3$ octave bands)
- Press **1** key for Channel A (Data-logs parameters from channel A Only) or **2** key for Channel A and Channel B (Data-logs channel A and B)

Change the settings on Channel A

- Press the **number key** corresponding to the setting you wish to change
- Press **Soft Key 2** or **Soft Key 3** to change the value (Up or Down)
**Note: Where required use the left and right arrow keys to move the selection*
- Press **OK** key to confirm the setting.

- If Ln percentiles (e.g. L₁₀, L₅₀) are not required, press **Soft Key 4** (Next)
- If Ln percentiles are required, press **5**, then **Soft Key 2**, then **ok**

If Ln percentiles are required

- Press **6** key to set up Ln values
- Press the number key corresponding to the Ln value you wish to change
- Use the **Alpha / Numeric Keypad** to enter a value between 0 and 99. Use the **Left Arrow Key** to erase.
- Press **OK** key, press **Soft Key 4** (Next)

Change settings on Channel B

- Press the number key corresponding to what you wish to change
- Press **Soft Key 2** and **Soft Key 3** to change the value
- Press **OK** key
- Press **Soft Key 4** (Next)

Timers

- Press **1** key (No Timer – The other options are explained in the handbook)
- Use **Alpha / Numeric Keypad** to enter the log name (as on a mobile phone)
- Press **Soft Key 1** to toggle between characters and numbers
- Press **OK** key

Yes	No
<ul style="list-style-type: none">• Press Soft Key 2• Use Alpha / Numeric Keypad to enter the template name with Soft Key 1 to toggle characters and numbers• Press OK key	<ul style="list-style-type: none">• Press Soft Key 3

Press **Start/Stop** key to begin logging

