


Castle Pro-DX Excieo

Keyboard Layout Guide

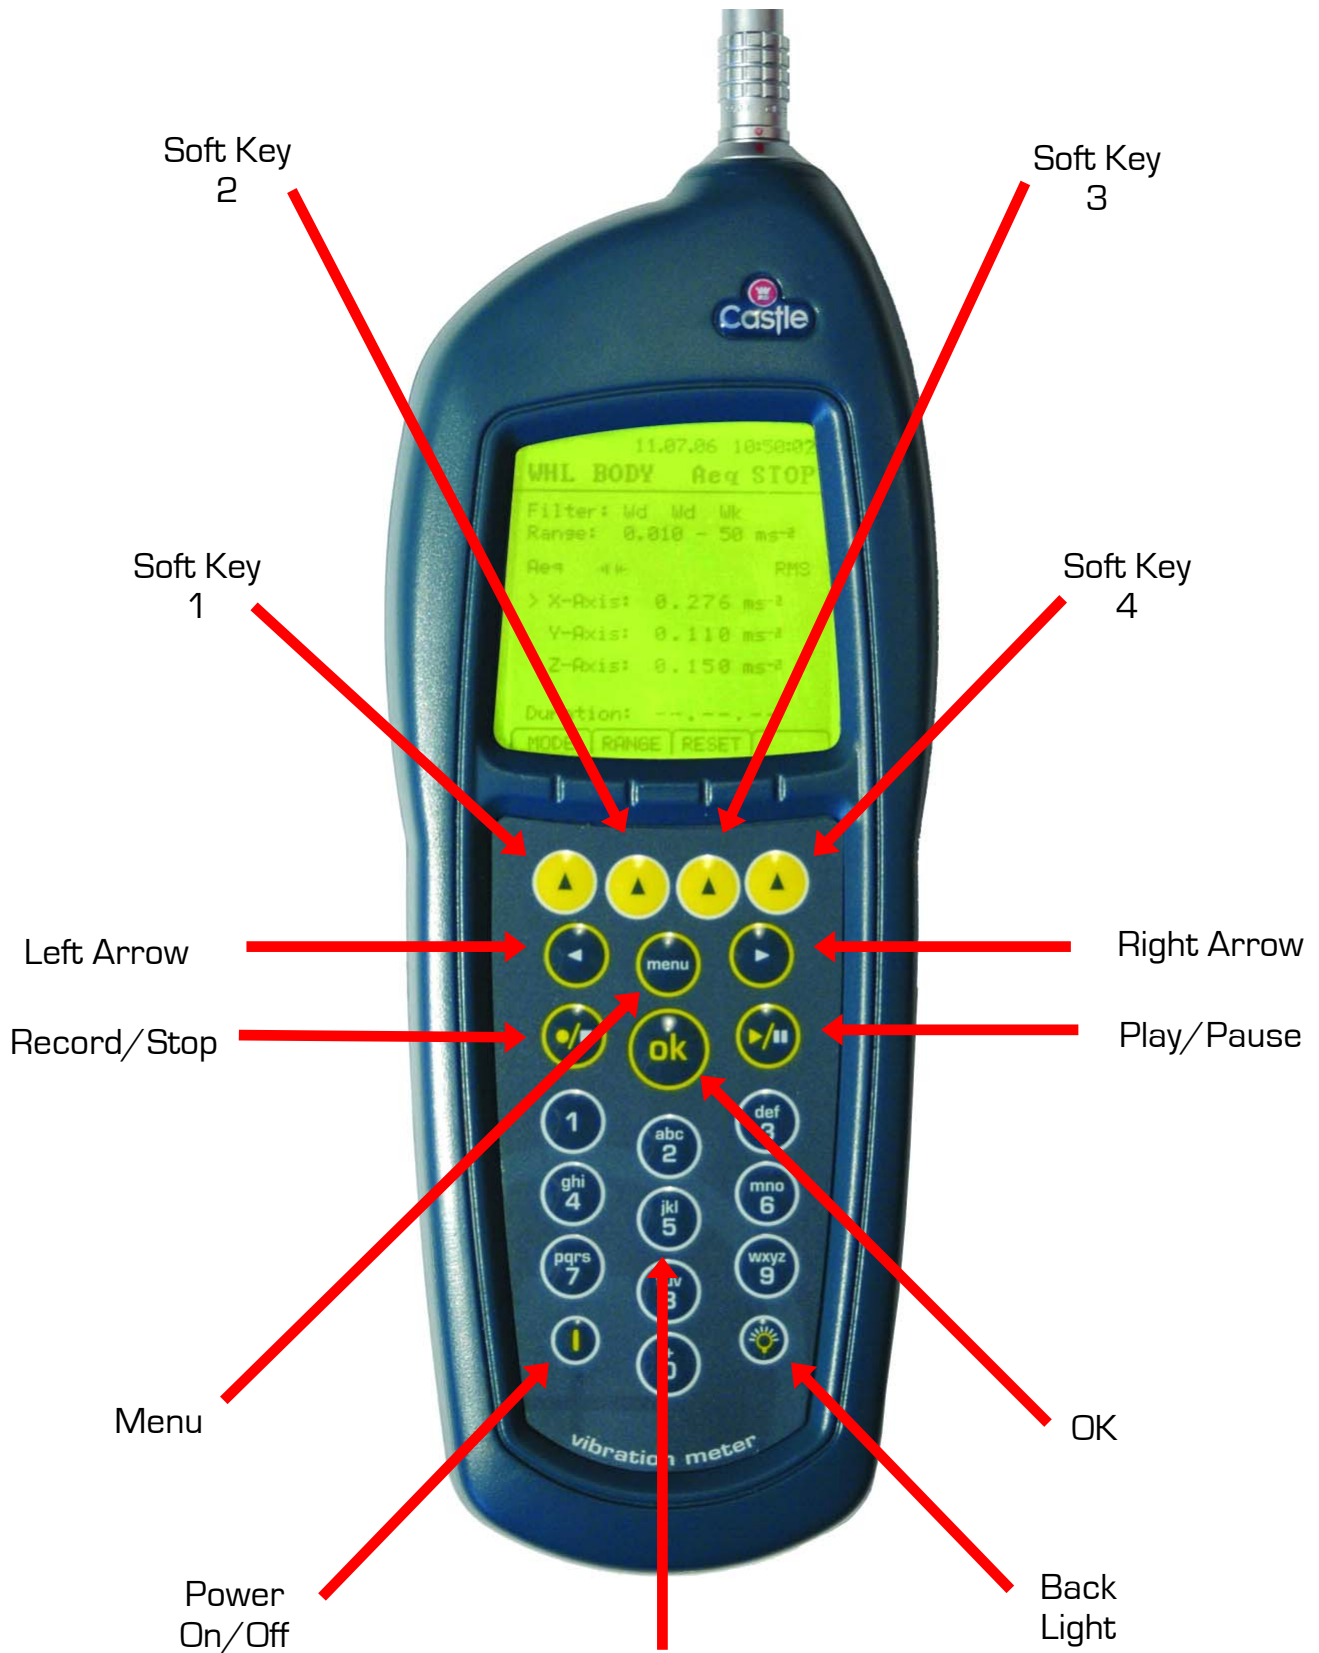

Alpha/Numeric Keypad



Castle
advanced sound solutions

Castle Pro-DX Excieo

Taking a log

- Attach the required Accelerometer
- Press the **Power On/Off** key
- Press **Soft Key 1** (MODE) and select the required logging mode (depending on model)
- Press **Soft Key 4** (SETUP) and choose the required logging options (depending on model and mode)
- Select the appropriate range by repeated pressing of **Soft Key 2** (RANGE)
- Press **Record/Stop** key and the elapsed time will be displayed
- The parameters being measured can be viewed during logging by using the **Left and Right** Arrow keys
- Press **Record/Stop** key again after the desired measurement time and the elapsed time will stop

Viewing results

- Press the **Left and Right** Arrow keys to scroll through the measurement results
- Press **Soft Key 2** (TIME) and enter the required exposure time (depending on model)

Saving a log

- Press **Soft Key 4** (SAVE) key
- Press **1** key to enter a numerical code of your choice using the numerical keypad followed by the **OK** key
- Press **2** key to enter an employee name/ reference using the **Soft Key 2** to toggle between LETTERS, and NUMBERS, **3** to toggle between UPPER and LOWER case and **4** to insert SPACE followed by the **OK** key
- Repeat this process for **3** Tool and **4** Location
- Press **Soft Key 4** (SAVE) and your log will be saved

Viewing a log

- Press **menu** key
- Press **1** key (Logs)
- Press **1** key (List All Logs)
- Use **Soft key 2** (UP) and **Soft Key 3** (DOWN) to scroll through the list until the required log is displayed
- Use the **Left and Right** Arrow keys to view extra parameters
- Using the numeric keypad press the number of the log you wish to view
- Use **Left and Right Arrow** keys to scroll through the results screens
- Press **Soft Key 1** (EXIT) to return to the Log List screen

Deleting a log

- Repeat **Viewing a log** (above) to view the required log
- Press **Soft Key 4** (MORE)
- Press **3** key (Delete)
- Press **OK** to Delete the Log or **Soft Key 1** (CANCEL) if you do not want to delete the log **(please note deleted logs cannot be recovered)**
- The instrument should now return to the Log List screen

Switching off

- Press the **Power On/Off** key
- Press **OK** key
- Leave unit off for at least 5 seconds before powering back on